




## Site Mapping in the Surface-water Modeling System

# Scatter Module Map Module

By
Alan K. Zundel
Brigham Young University
Provo, Ut
zundel@byu.edu




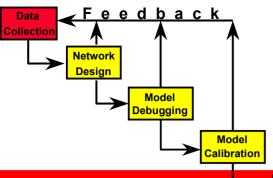



#### **Data Collection**



- Model Application
- Model Domain
- Base Mapping
- Geometry
  - Bathymetry
  - Topography
- Hydraulic/Wave/tide Data

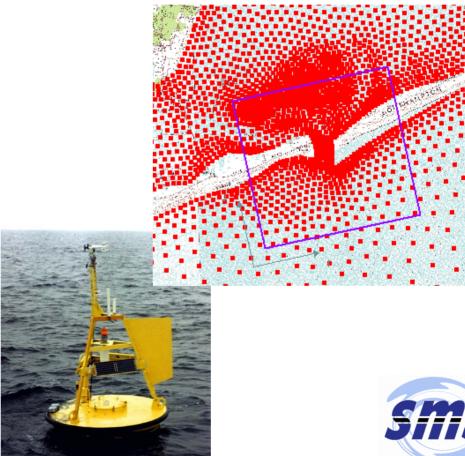

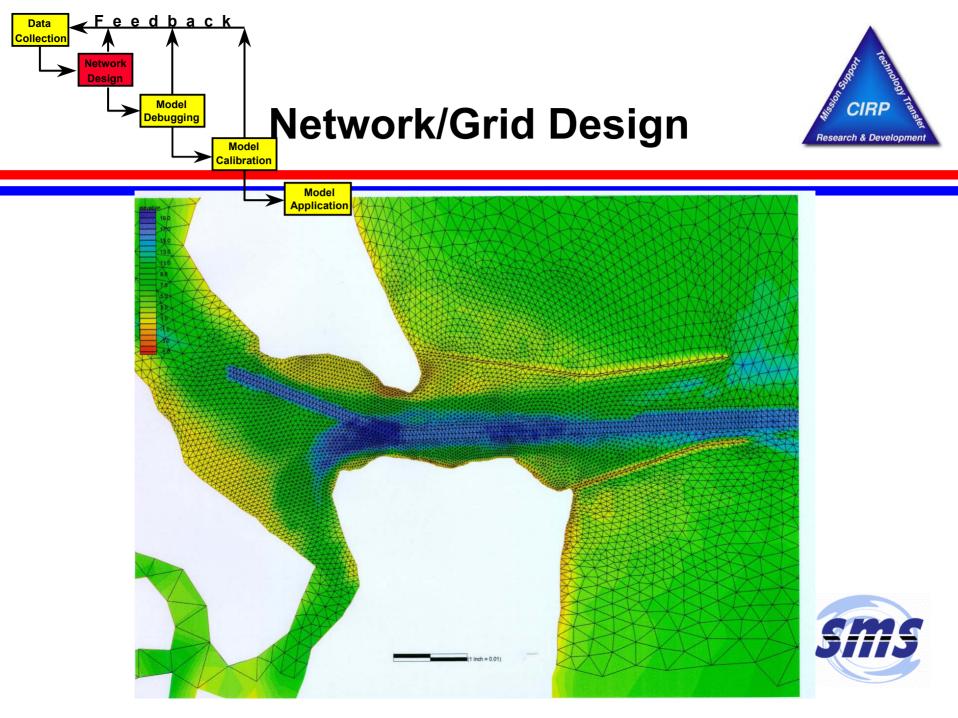


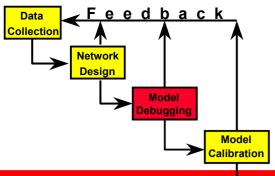

#### **Model Debugging**






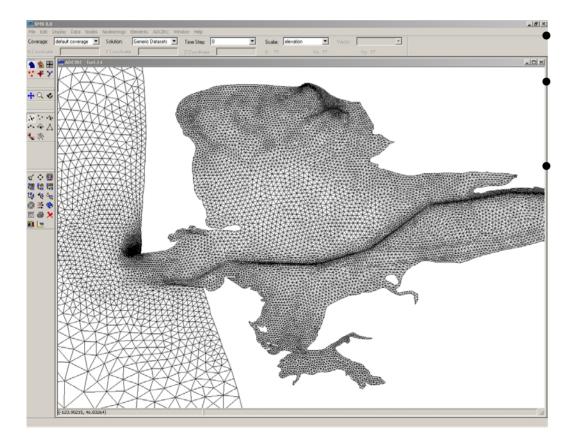


Check Network Data
Check Model
Representation
Edit as Needed based
on model output



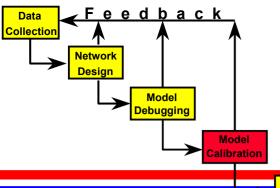


#### **Model Calibration**



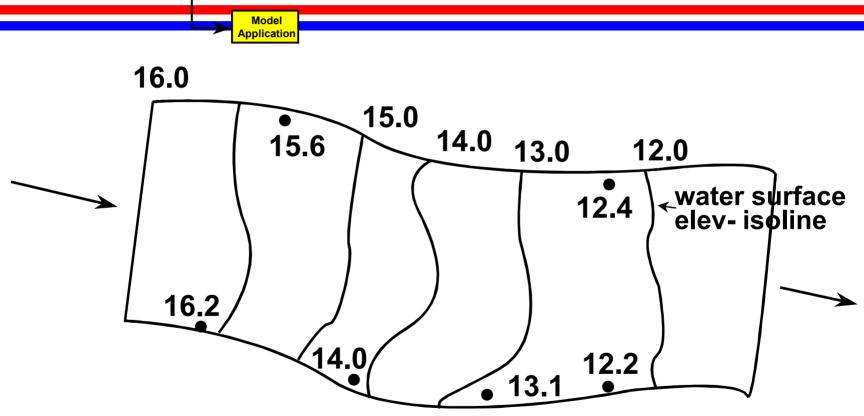

**Observed water elevations** 



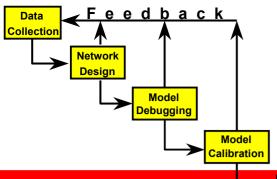

## **Model Application**



Model Application


- Within Range Calibrated
- Within Range Validated
- Careful Evaluation of Results Needed Otherwise






#### **Data In SMS**

- Map Module
  - Images
- Scatter Module
  - Scattered Depth Data

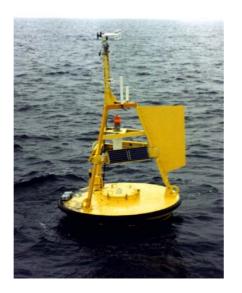

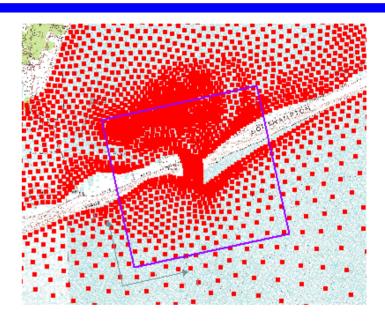






#### **Images**

#### **USGS** Downloads

- http://terraserver.homeadvisor.msn.com/default.asp
- Quad Sheets
- Nautical Charts

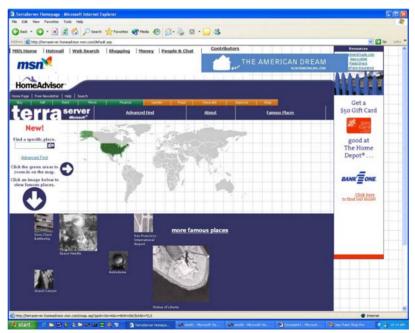




Zoom in by clicking on an desired area.

#### **Image Registration**




- Register Image Dialog
   Opens When an Image is
   Opened
- Three Points are used to Geo-Reference the Image
- Tiff World File can Store the Registration

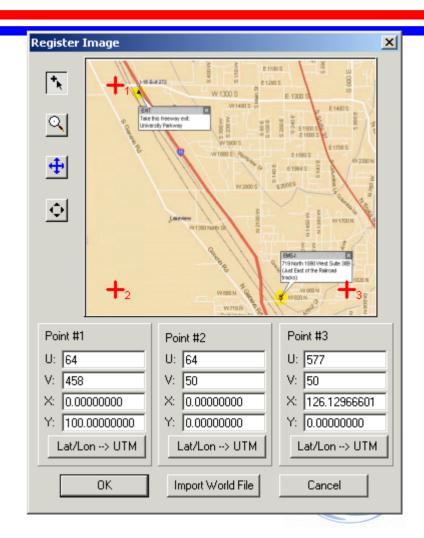



#### **More About Images**

- Images Look
   Smooth Until
   Zoomed In
- Pixels Define Image Colors
- Image Must be Geo-Referenced

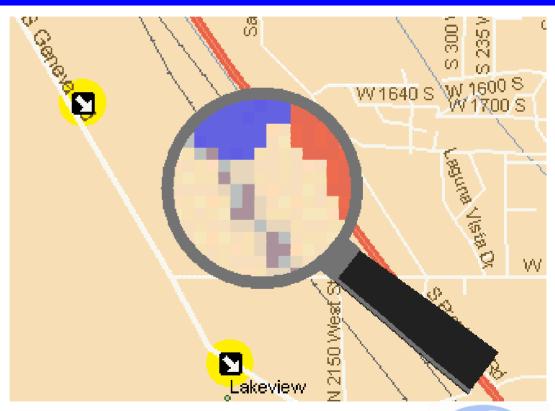





## **Image Data**



#### Overlay data over images

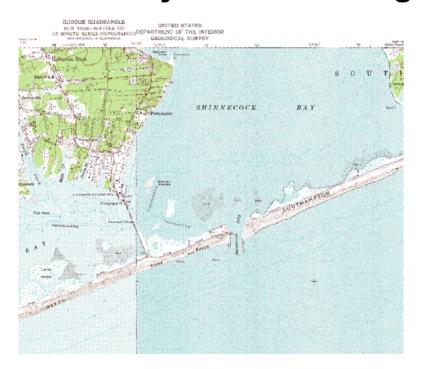

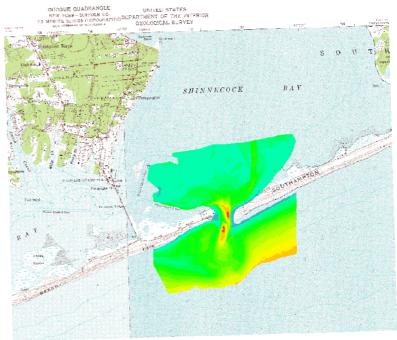





## Memory Usage - Resample



- Image files may be very large
- Saved in program at screen resolution

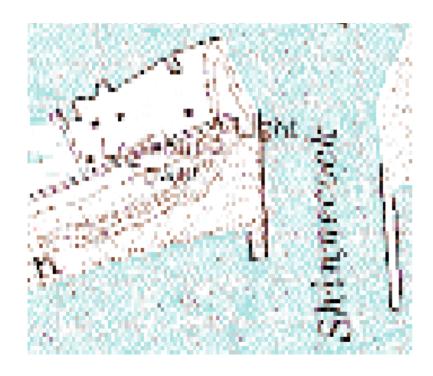

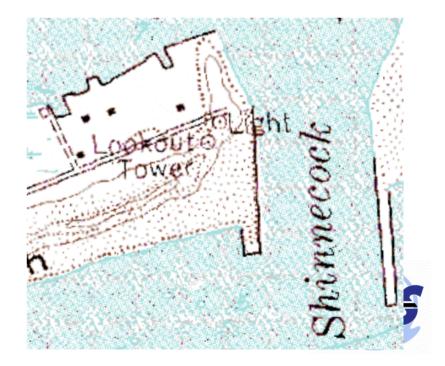



## **Hydraulic Data**



- Gaging Station Records
- FEMA, NOAA, and other previous Studies
- Field Measurements
- Historical Data








#### **Scatter Module**

- Stores spatially varied data
  - Bathymetric data most common
  - Interpolates from on grid to another
  - Allows combination of data sources
  - Data thinning or filtering

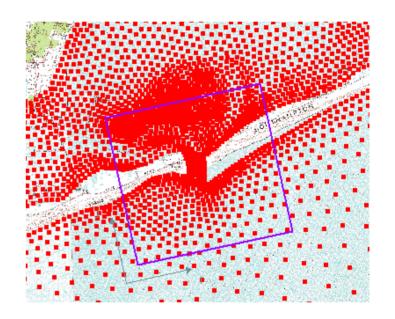







#### **Scatter Data Sources**

- Previous Studies
- Local Surveys
- Databases
  - ADCIRC East Coast Database
  - GEO-DAS

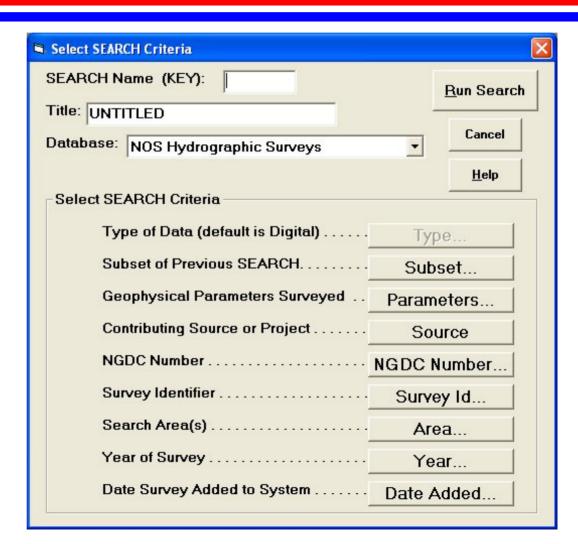



## Starting a GEO-DAS Search

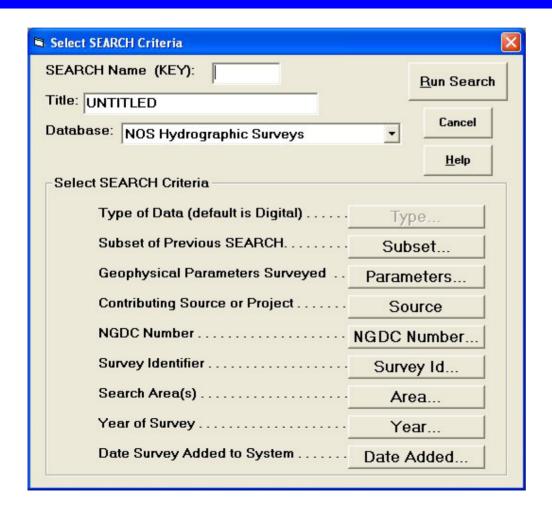

Select File | New Search to bring up the Select Search Criteria dialog.

Enter any SEARCH Name and Title.


Set the *Parameters..., Source, Area, and Year....* 

Click the *Run Search* button to run the search.





## Reviewing a GEO-DAS Search

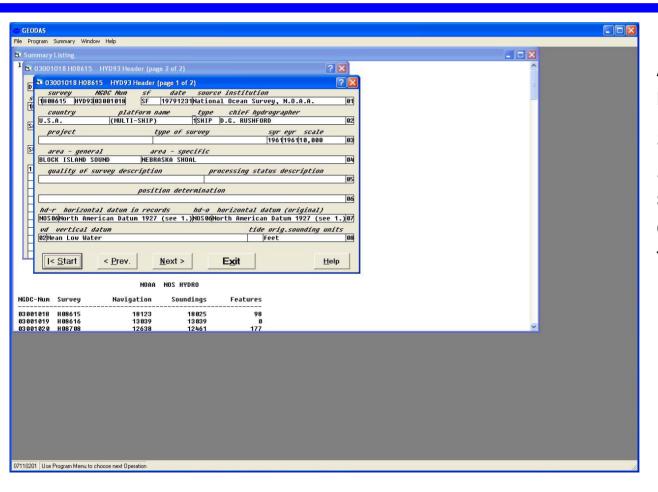


After the search has been run:

Select *Program* | *Retrieve Headers* to find out specific information about each of the surveys found.





#### **Saving Data from GEO-DAS**

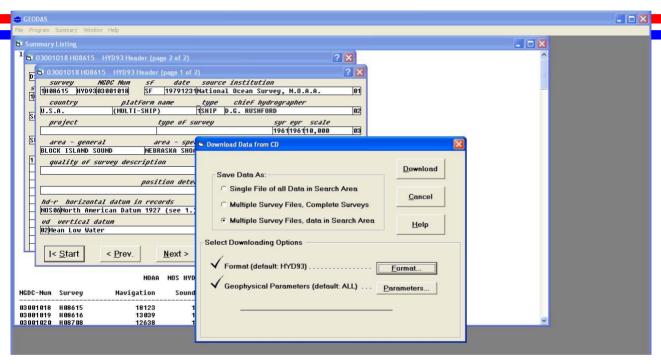

- •Select:
  - Program Download Data...
- •Choose:
  - Multiple Survey Files, data in Search Area."
  - Set format as "Space Delimited XYZ ASCII Format."
- Click Download.



## **Geo-Referencing**




- Data is Useful Only When Geo-Referenced
- Data in the Same Coordinate System can be Merged Together
- TIFF/JPEG Images Can Also Be Geo-Referenced



#### **Coordinate Conversion**



- Coordinate System is Specified in SMS
- Coordinate Conversion is Supported inside SMS

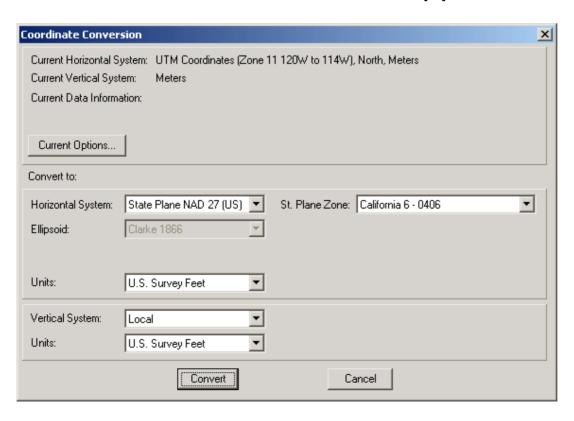





## **Horizontal Coordinate Systems**



- Geographic
- State Plane
- UTM
- NAD 27/83/HPGN
- Units
  - Meters
  - US Survey Feet
  - International Feet

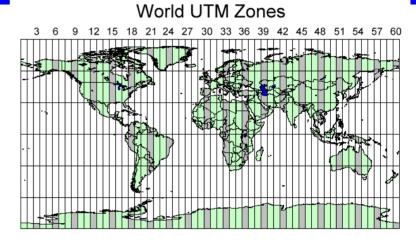

U.S. UTM Zones

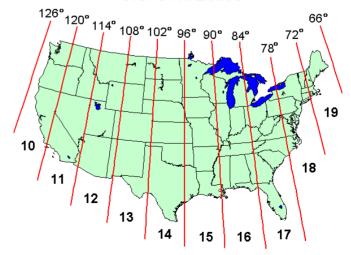



### **Vertical Coordinate Systems**



- NGVD 29
- NAVD 88
- Units
  - Meters
  - US Survey Feet
  - International Feet

